


STEP 5

Assembly the mounting bracket by 2pcs M4 self-tapping screws.

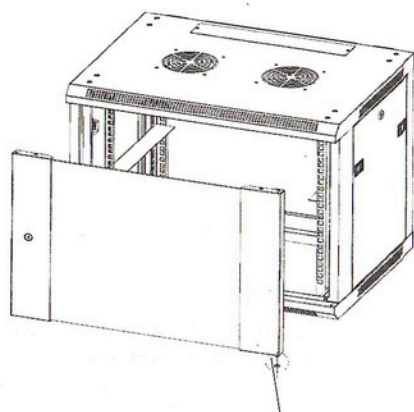


White plastic washer

STEP 6

Assembly the front door with 1pcs white plastic washer and bolt. And toolless assembly the side doors.

Note: After assembly, please adjust the diagonal size of the cabinet to ensure homogeneous space for all doors and all doors work well.

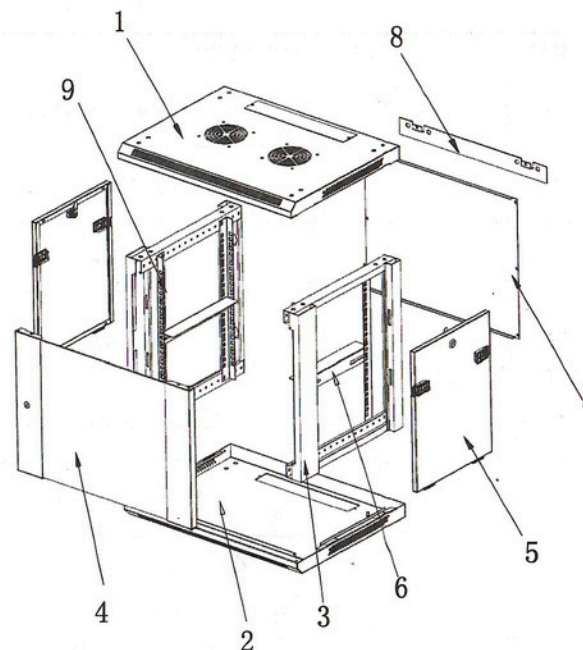

Packaging List

- | | |
|----------------------|-----------------------------|
| 1. Top cover- 1pcs | 6. L -shaped bracket - 2pcs |
| Bottom panel- 1pcs | 7. Rear panel - 1pcs |
| 2. Frame- 2pcs | 8. Mounting bracket - 1pcs |
| 4. Front door - 1pcs | 9. Vertical bracket-4pcs |
| 5. Side panels- 2pcs | |

Item List of Accessories Packaging

Assembly Hardwares Kits:

- | | |
|-------------------------------------|--------------------------------|
| • M8*12 inner hexagon screw - 16pcs | • White plastic washer - 1pcs |
| • M8 flange nut - 16pcs | • Keys-2pcs |
| • M6*12 screw - 4pcs | • M5 self-tapping screw - 8pcs |
| • M6 cage nut - 4pcs | • L type wrench-1pcs |
| • M4 self-tapping screw - 16pcs | |










User Hardwares Kits:

U Capacity <=12U, 12 sets cagenuts ; U Capacity >12U, 24 sets cagenuts.


(cagenut : M6*12 screw & M6 cage nut)

Tips: Check the quantities of the items before assembly.

Installation of Accessories


NO.	QTY	SCREWS AND NUTS	
1	16		M8*12 inner hexagon screw
2	16		M8 flange nut
3	4		M6 Screw
4	4		M6 cage nut
5	4		M4 Self-tapping Screw
6	1		White plastic washer
7	2		Key
8	8		M4 Self-tapping Screw
9	1		L type wrench

Installation

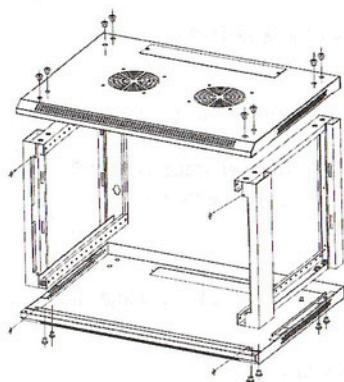


STEP 1

Assembly the top cover, bottom panel and horizontal brackets by 16pcs M8*12 inner hexagon screws and 16pcs M8 flange nuts. and assembly the top cover, bottom panel and frames by 4pcs M4 self-tapping screws.

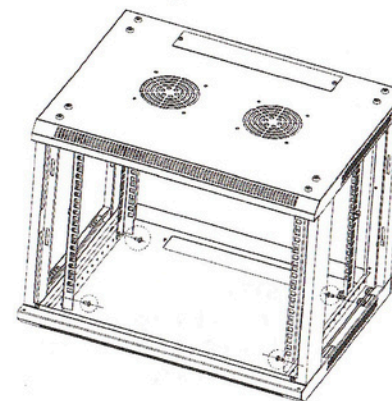


STEP 2

Assembly the vertical rails by 8pcs M5 self-tapping screws.

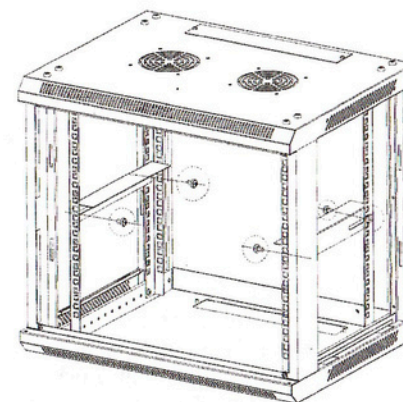

STEP 3

Assembly the L-shaped brackets by 4 sets M6 cagenuts.

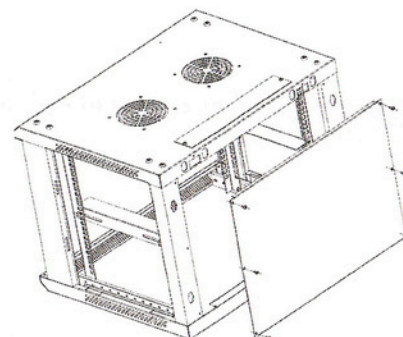

STEP 4

Assembly the rear panel by 6pcs M4 self-tapping screws.